


The front panel

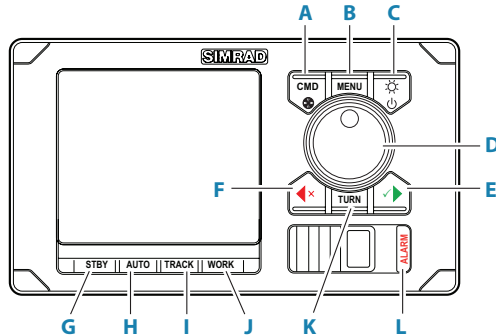

Description

A Command/Thruster key

- Press to take/request command
- Press and hold to activate/deactivate available thrusters

B MENU key

- Press once to display the Quick menu
- Press twice to show the Settings menu

C Power/Brilliance key

- Press to display the Display setup dialog
- Press and hold to turn the unit to sleep mode

D Rotary knob

Menu and dialog operation:

- turn to move up and down in menus and dialogs
- turn to adjust a value
- press to select a menu option and to enter the next menu level

In Standby and NFU mode:

- press and hold to activate Follow up (FU) mode

In FU mode:

- turn to set the rudder angle


In automatic modes:

- turn to change the set heading/set course, press to re-activate automatic mode with current heading/course as reference

Description	
E	<p>Starboard (confirm) key</p> <p>Menu and dialog operation:</p> <ul style="list-style-type: none"> press to confirm/enter next menu level <p>In Standby mode:</p> <ul style="list-style-type: none"> press to activate NFU mode <p>In automatic modes:</p> <ul style="list-style-type: none"> press to change set heading/set course to starboard
F	<p>Port (cancel) key</p> <p>Menu and dialog operation:</p> <ul style="list-style-type: none"> press to cancel and to return previous menu level press and hold to close the menu <p>In Standby mode:</p> <ul style="list-style-type: none"> press to activate NFU mode <p>In automatic modes:</p> <ul style="list-style-type: none"> press to change set heading/set course to port
G	Standby key - Press to turn the autopilot to Standby mode
H	<p>Auto key</p> <ul style="list-style-type: none"> Press once to activate Auto or NoDrift mode Re-press to toggle between the Auto and NoDrift mode options
I	Track key - Press to activate Nav mode
J	<p>Work key</p> <ul style="list-style-type: none"> Press to display the Work quick menu Re-press to toggle between different work modes/profiles
K	Turn key - Press to display the Turn quick menu
L	Alarm key - Press to display the list of active alerts


The Power/Brilliance key

Press and hold:	Switch the system to sleep mode
Single press:	Display the Display setup dialog
Repeated presses:	Toggle preset backlight levels

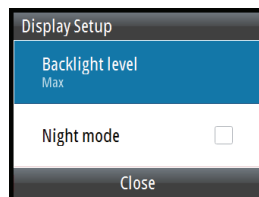

→ **Note:** If you hold down the power key after the display is turned to sleep mode, the unit will reboot and a Power failure alarm will be activated. Press any other key on the unit to silence the alarm.

The screen

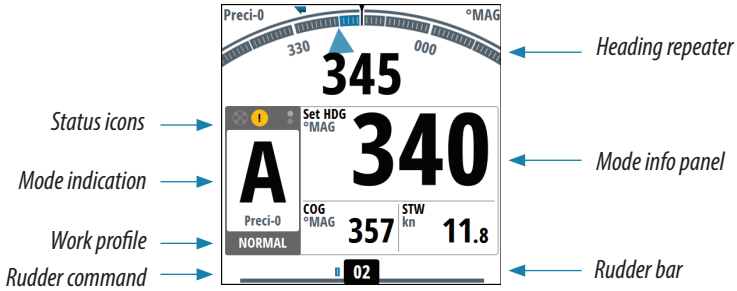


Icon	Description
	Icon available if a thruster is installed. The icon will be shaded when the thruster is deactivated for steering
	Active alerts. Red icon for alarms, orange for warnings, yellow for cautions
	Locked control unit
	Picture freeze indicator. Two dots alternate slowly to show that the screen is alive and that information from sensors is updated


Command transfer and unit lock

Take command

 

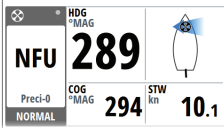
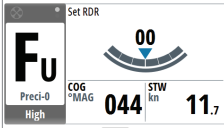


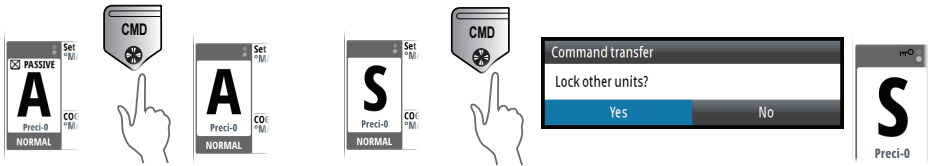

 
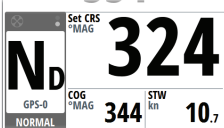

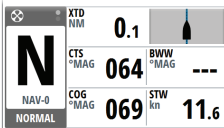
Command transfer - Lock other units

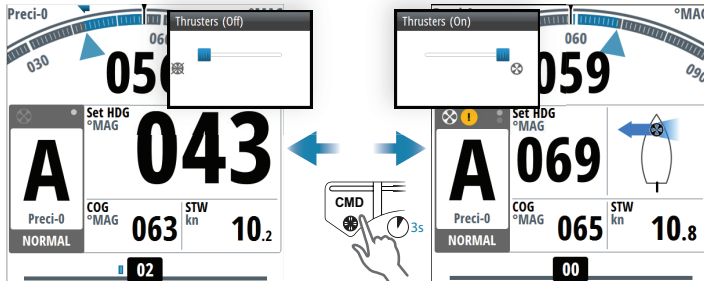

Activating and deactivating the thruster



Autopilot modes

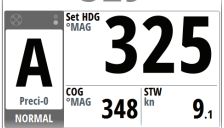
Mode	Activate	Mode display	Rotary knob		PORT/ STBD keys
			Turn	Press	
Standby			No action	Press and hold to switch to FU mode	Switch to NFU mode
NFU	Press PORT/STBD keys in STBY or FU mode		No action	Press and hold to switch to FU mode	Give rudder command
FU	Press and hold rotary knob in STBY or NFU mode		Set rudder angle	No action	Switch to NFU mode
AUTO	 		Change set heading	Capture present heading	Change set heading
NoDrift	 		Change set course	Capture present course	Change set course
NAV			No action	Press and hold to activate Track offset, then turn to set the offset.	No action

Work profiles


Show Work profile options





Select profile

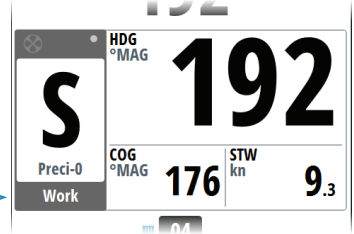


Create new profile

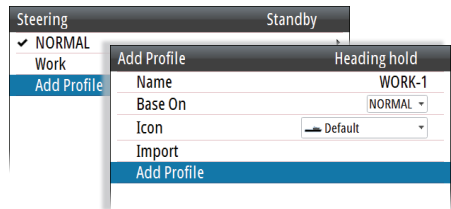

Edit profile

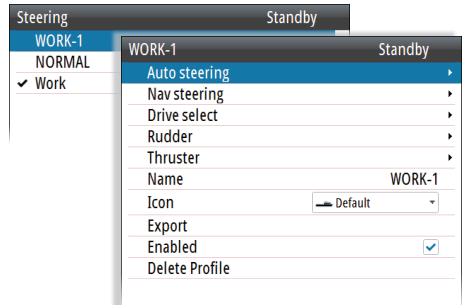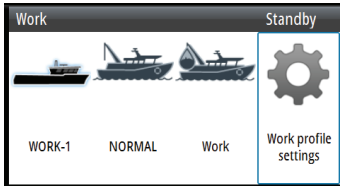


Alerts

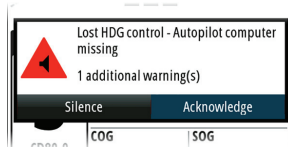

Option	Result
Acknowledge	Sets the alarm state to acknowledged, meaning that you are aware of the alarm condition. The siren/buzzer stops and the alarm dialog is removed. However, the alarm remains active in the alarm listing until the reason for the alarm has been removed.

Silence	Mutes the siren locally (for 30 seconds) for all units in the same network alarm group. The alert dialog remains on the display.
Close	Caution messages time-out, you can close the alert message pop-up.

Quick menus

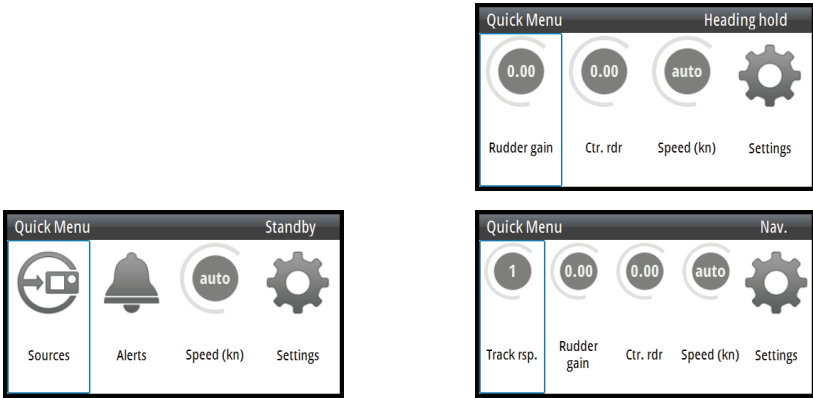


Manual modes

Automatic and navigation modes

	Automatic and manual source selection		Manual setting (Rudder, Counter Rudder, Rudder gain, Speed)
	List of active alerts		Access the Settings menu

Settings menus

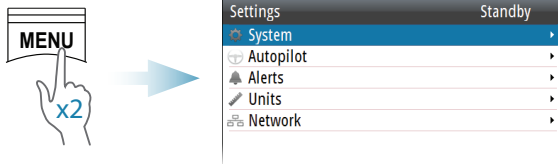

The Settings menu can also be accessed from the Quick menu. Refer to the Operator manual and Installation manual.

